STAGE V[®] INTAKE ROCKER ARMS

IMPORTANT!!!

Intake Rocker Arms are shipped DRY, free of any oils to prevent dust attraction.

PLEASE BEFORE USE


Lube roller end with a good quality lubricant, such as STA-LUBE® Moly-Graphite Engine Assembly Lube. Knead lube thoroughly to make sure pin is coated inside the roller.

Also, use Anti-Seize on adjuster threads to prevent galling. Engine assembly lube works well in pushrod socket.

Note: When assembling a rocker assembly remember Rocker Stands #2 & #4 are oilers and must be in the correct location. Be sure that Rocker Shafts are oriented properly.

TO DETERMINE IF A ROCKER ARM IS 1.6 OR 1.7 RATIO (see illustration)

Note: This only applies to the new style of Intake Rocker Arm with the stiffener on the bottom.

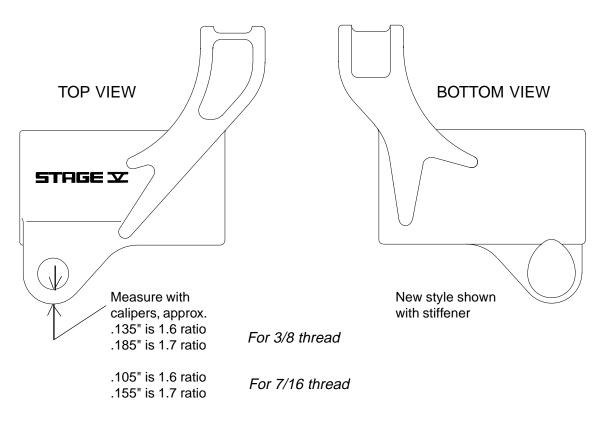

Available through



P.O. Box 827, Walnut, CA 91788-0827, U.S.A. **(909)594-8383** FAX(909)598-3445